



## The preferred source for instrument Rentals, Sales, Service and Supplies

Anchorage Seattle Fairbanks (907) 770-9041 (253) 373-9041 (907) 374-9040

## Electronic Control Unit Quick Start Guide

Model 464 - 125psi & 250psi

## Control Panel

- 1 Select a menu item. Press and hold to turn Control Unit off.
- 2 ← → ↑ Navigate through menus and menu items.

www.tttenviro.com

- **3** ♠ **U**Cycle through numbers and letters when editing.
- 4 Manual Control Valve: When pushed, solenoid opens, allowing drive cycle.

info@tttenviro.com

- **5 Regulator**: Turn to increase or decrease pumping pressure.
- **6** Battery Enclosure: 4 AA alkaline batteries.
- **7** Air Out: Drive line to pump.
- **3** Air In: Supply line from compressed gas supply.



Notes: 1) The Control Unit does not come with the batteries installed.

2) Pressing any keypad button will turn the Control Unit on.



## Main Menu

- A Bars indicate amount of time remaining before Unit turns off. Unit will automatically turn off after 5 minutes of being idle.
- B Battery life remaining. Icon will flash at 0% battery.
- C Percentage of battery life remaining.
- D Indicates a menu can be accessed using left cursor.
- E Indicates there is a sub-menu for the active menu item.
- F User Flow Rates: Create, Save, and edit customized drive/vent cycles.
- G LCD Contrast: Adjust contrast of LCD screen.
- H About: Displays installed firmware version.

I Preset Flow Rates: Select a flow rate with predefined drive and vent cycles:

PRESET FLOW RATES				
Flow	Drive	Vent		
Low	50 s	25 s		
Med	10 s	8 s		
High	3 s	3 s		

	Α	В	C	
	ııll	174	66	
D		4 Main N	lenu 🕨	Ε
1	Preset Flov	v Rates		
F	User Flow F	Rates		
G	LCD Contra	st		
Н	About			

January 24, 2011 (#109589)

® Solinst is a registered trademark of Solinst Canada Ltd.

