

Gilian®

FILTER CASSETTE HOLDER KIT

(Part No. 800143)

Introduction

The Gilian Filter Cassette Holder Kit has been designed to attach the filter cassette to the worker's shirt collar. The unique "U"-Tube design positions the filter cassette into the proper facedown attitude, while conveniently running the tubing out of the worker's way and onto the sampling pump.

The flexible plastic coupling on the end of the "U"-Tube accepts the Molded Boss type of filter cassette directly (see Figure 1).

When using other types of cassettes that require an adapter, install a Leur Taper Adapter into the flexible plastic coupling on the "U"-Tube (see Figure 2). Connect the filter cassette onto the Leur Taper by inserting the taper end into the outlet port of the cassette. Rotate the cassette on the adapter slowly while applying firm pressure.

NOTE

Excessive pressure will crack the inlet mounting of the cassette.

Check the connection by gently pulling on the filter cassette. It should be firmly attached and require a reasonable amount of force to remove.

Component Checklist

Part No.	Description
200157	"U"-Tube
800066	Collar Clip
200484	Tubing (36") (1/4" ID x 3/8" OD)
200156	Leur Taper Adapter
800142	Clips (for positioning hose) (Qty=2)

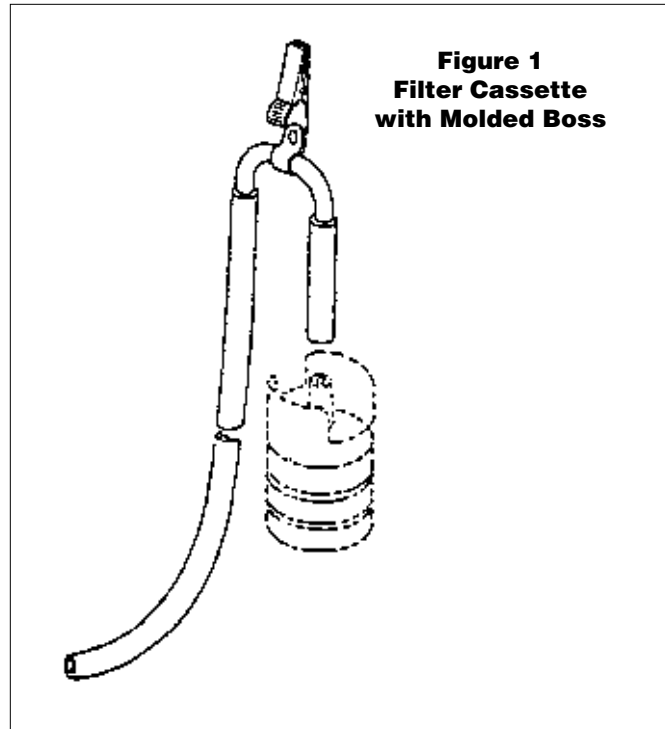


Figure 1
Filter Cassette
with Molded Boss

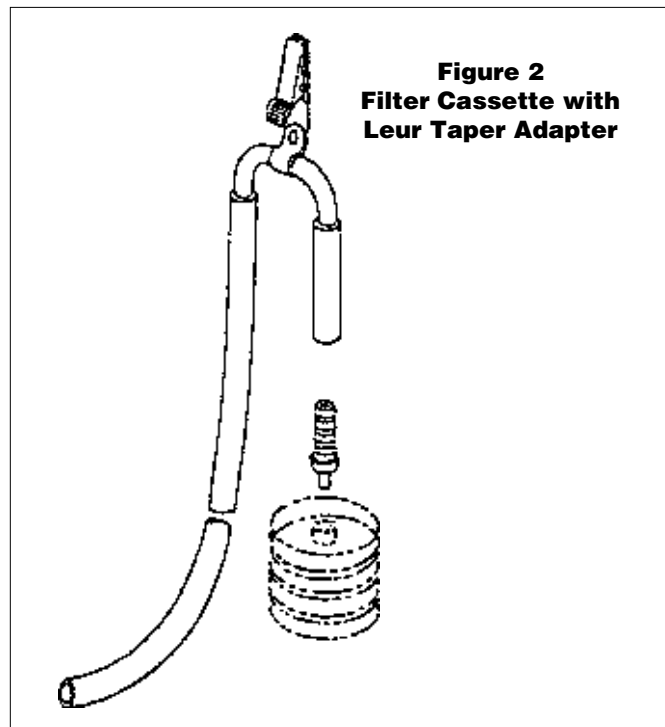


Figure 2
Filter Cassette with
Leur Taper Adapter

SENSIDYNE®

16333 Bay Vista Dr. • Clearwater, FL 33760 • (800) 451-9444 • Fax (727) 539-0550 • www.sensidyne.com

Revision B • Document No. F-PRO-1217